


# STEP-BY-STEP GUIDE TO MEASURING FOR ROBE DOORS

## YOU WILL NEED

1. Measuring Tape
2. Notepad or Paper
3. Pencil or Pen

DIAGRAM OF ROBE DOOR OPENING

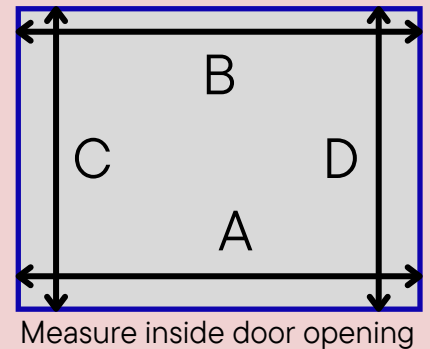

01

## MEASURING WIDTH

### A. Bottom Width:

- At the bottom of the wardrobe opening
- Measure across from the inside of one side to the inside of the opposite side (as shown in measurement A on the diagram)
- Record this as the Bottom Width

02

### B. Top Width:

- Repeat the process at the top of the wardrobe
- Measure across from the inside of one side to the inside of the opposite side (as shown in measurement B on the diagram)
- Record this as the Top Width

03

## MEASURING HEIGHT

### C. Left Height:

- On the left-hand side
- Measure from the bottom to the top of the wardrobe opening (as shown in measurement C on the diagram)
- Record this as the Left Height

04

### D. Right Height:

- On the right-hand side
- Measure from the bottom to the top of the wardrobe opening (as shown in measurement D on the diagram)
- Record this as the Right Height

05

## OPTIONAL: CHECK FLOOR LEVELS

### Floor Level Check:

- Use a level to check if the floor is even.
- If the floor is uneven by more than 10mm, consider installing a level floor batten to ensure smooth operation of the robe doors.

## NOTE

Use a ladder if needed for accurate top measurements

*Following these steps will help ensure accurate measurements for robe doors, allowing for proper fitting and smooth functionality.*